XIAOMI Handheld Steam Iron User Manual · 01
Xiaomi Handgehaltenes Dampfbügeleisen Bedienungsanleitung · 13
Manuale utente Xiaomi Handheld Steam Iron · 25
Manuel d'utilisation du Xiaomi Handheld Steam Iron · 37
Manual de usuario de Xiaomi Handheld Steam Iron · 49
Руководство пользователя утюга-отпаривателя Xiaomi Handheld Steam Iron · 61
Instrukcja obsługi żelazka parowego Xiaomi · 74
Xiaomi Taşınabilir Buharlı Ütü Kullanım Kılavuzu · 86
Panduan Pengguna Xiaomi Handheld Steam Iron · 98
Руководство пользователя ручного отпаривателя Xiaomi Handheld Steam Iron · 110
Manual do utilizador do Ferro a vapor portátil Xiaomi · 122
Bàn ủi hơi nước cầm tay Xiaomi Hướng dẫn sử dụng · 134
Xiaomi портативті бу үтігінің пайдаланушы нұсқаулығы · 146

Read this manual carefully before use, and retain it for future reference.

Safety Instructions

Make sure to observe the following safety precautions to reduce the risks of errors, electric shocks, injuries, fires, deaths, and damage to equipment or property.

- This steam iron is intended for household use only.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The glove is a giveaway. It is not a professional protective glove and do not use it for professional protection.
- When using the steam iron, make sure to prevent danger due to steam sprays.

Symbol descriptions:

- This symbol indicates actions that are prohibited during operation.
- This symbol indicates actions that are mandatory for the safe operation of this steam iron.

Power cord and power plug

- Do not use the steam iron if the power plug that is plugged into the electrical outlet is loose, or if the power cord or plug is damaged or becomes hot. Otherwise, it may cause burns, electric shocks, or fire due to short circuits.
- Do not insert or remove the power plug with wet hands to avoid electric shocks and injuries.
- Do not use the steam iron if the power cord is tied together; otherwise, it may cause electric shocks or fire due to short circuits.
- Do not damage, modify, forcefully bend, pull, twist, or squeeze the power cord, nor place heavy objects on top of it; otherwise, it may cause electric shocks or fire due to short circuits.
- Always unplug the steam iron by pulling the power plug rather than the cord. Otherwise, the power cord may break, causing burns, electric shocks, or fire due to short circuits.
- Ensure the power plug is completely plugged into a 220–240 V~ electrical outlet. Do not overload the electrical outlet or circuit to avoid electric shocks or fire due to short circuits.

Usage and storage

- Avoid dropping the steam iron or subjecting it to strong impacts. Do not use the steam iron if it experiences a fall that results in visible damage or leakage. Otherwise, it may lead to electric shocks or fire due to short circuits.
- Do not use the steam iron if the ironing soleplate gets damaged, or it may cause the clothing to be worn or scratched.
- Do not add hot water, detergent, perfume, starch, or other chemicals to the water tank; otherwise, the tank will be deformed, which may cause explosions or fire due to short circuits.
- Do not use the steam iron with wet hands to prevent electric shocks or fire due to short circuits.
- The iron must not be left unattended while it is connected to the supply mains.
- During use, the ironing soleplate and the plastic components around it are relatively hot. Do not touch them with your hands to prevent burns and scalds.
- Do not aim the ironing soleplate at people or animals during use, as it will release high-temperature steam. Maintain a safe distance between the steam iron and children, infants, and animals during use to prevent steam scalds.
- Do not block the steam outlets or insert foreign objects into them to avoid burns, scalds, electric shocks, or fire due to short circuits.
- While ironing, do not let the ironing soleplate rest on the surface of the clothes for an extended period.
- The steam iron must be placed and used on a stable surface for horizontal ironing.
- When placing the steam iron on its base, ensure the base is positioned on a stable surface.
- Do not immerse the steam iron in water.
- Do not touch any remaining water droplets that may flow out of the steam iron's pipeline after steam ironing to prevent burns and scalds.
- Keep the steam iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Do not repair, disassemble, or modify this steam iron on your own, or injuries may occur due to fire or malfunctions. If repairs are needed, contact the after-sales service team.
- Before using the steam iron, ensure the cover of the water tank is secured in place to prevent electric shocks or damage to the steam iron.
- When using the steam iron, make sure to prevent danger due to steam sprays.
- Unplug the power cord before refilling or cleaning.
- The steam iron must be used with the base (model: B502CN-DZ) included.
- The steam iron must be used on a stable surface for horizontal ironing.
- If the steam iron does not generate steam, fails to heat up, has a large amount of water overflowing, gives off smoke, emits a burning smell, or experiences other malfunctions or errors, stop using it immediately. Then disconnect it from power and contact the after-sales service team. Such situations may cause electric shocks, injuries, or fire due to short circuits.
- Care should be taken when using the appliance due to the emission of steam.
- Unplug the appliance during filling and cleaning.
- The handheld steam iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The filling, or decalcifying, or rinsing, or inspection apertures that are under pressure shall not be opened during use.
- When placing the iron on its base, ensure that the surface on which the base is placed is stable.

Product Overview

Steam Iron

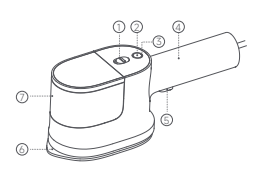

Accessory List

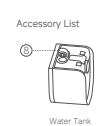

Water Tank (pre-installed)

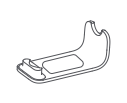
Base

Glove

① On/Off Switch	② Steam Button	③ Indicator
④ Handle	⑤ Steam Boost Button	⑥ Ironing Soleplate
⑦ Water Tank	⑧ Water Tank Cover	

Note: Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

The steam iron comes with dry ironing, wet ironing, and steam boost modes to efficiently iron clothes and easily smooth out stubborn wrinkles.

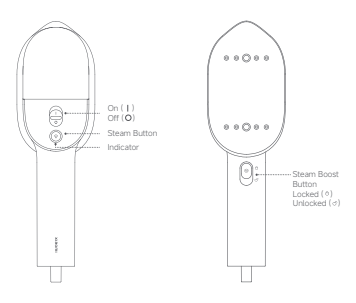

Indicator status description

Indicator status	Steam iron status
Breathing white	Heating
White	Heating completed
Breathing red	High-temperature alarm/internal error
Red	On standby

How to Use

Notes:

- It is recommended to wear the glove before ironing to prevent burns and scalds.
- Do not iron leather materials. For wool or synthetic fibers, iron on the reverse side to prevent shiny marks. For silk materials, place a soft cloth or towel between the steam iron and the fabric to avoid damage to the silk due to direct contact between the ironing soleplate and the silk.
- It is recommended to allow the steam iron to spray steam into the air for a few seconds before each ironing process to remove any residual scale inside.
- The dry ironing and wet ironing modes can be used separately or with the steam boost mode.
- It is normal to hear the water pumping sound during use.
- When the steam iron is heating up or completes wet ironing, it is normal for a small amount of steam to spray out due to the residual water in the internal pipeline.

• Adding water

1. Removing the water tank
Hold the water tank and pull it up vertically to remove it.

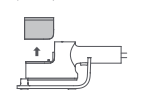

2. Filling the tank with water
Open the water tank cover and add purified water to the tank. After filling, close the water tank cover tightly.

Open the water tank cover

Fill up the water tank with water

Notes:

- To prolong the service life of the steam iron, it is recommended to use purified water to prevent the build-up of scale and the spray of white powder.
- Ensure the water tank cover is tightly closed to avoid water overflow; otherwise, it may cause electric shocks or damage to the steam iron.
- The steam iron may produce a louder water pumping noise when operating with an empty or improperly installed water tank.

3. Installing the water tank
Hold the water tank against the steam iron, and press it down vertically as illustrated. When you hear a "click", it indicates the tank is securely installed.

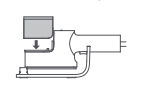

• Turning on

1. Fill the water tank with water and install it onto the steam iron. Place the steam iron on the base, and plug the power cord into an electrical outlet that meets the steam iron's requirements to connect the iron to power.
2. Toggle the on/off switch from "○" to "I" to turn on the steam iron. Then the steam iron will start heating with its indicator breathing white.
3. After about 30 seconds, the indicator will remain white, indicating the steam iron has completed heating. Take the steam iron from the base for use.
4. If the temperature drops during use, the steam iron will reheat, and its indicator will breathe white again, during which the steam iron can be used normally.

Caution: While the steam iron is heating up after being turned on, do not unlock and press the steam boost button to prevent scalding from the hot spray.

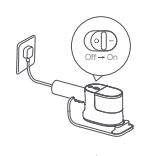

• Dry ironing mode

When the heating is complete, the steam iron can be used to iron clothes with the ironing soleplate. Dry ironing mode is ideal for wrinkle removal and shaping for dry clothes, as well as for drying damp clothes.

• Wet ironing mode

After the steam iron completes heating, press the steam button to enter the wet ironing mode, and then the steam iron will emit steam continuously for steaming. Press the steam button again to stop emitting steam.

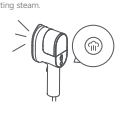

• Steam boost mode

Toggle the steam boost button from "🔒" to "🔓" to unlock it. Then press the button to emit a burst of steam.
When not planning to use the steam boost mode, toggle the steam boost button back to "🔒" to avoid enabling this function accidentally.

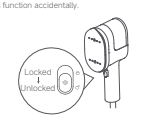

Notes:

- Do not press the steam boost button too often with an interval of less than 5 seconds, or water droplets may accumulate on the ironing soleplate due to excessive steam.
- When using the steam boost mode, press the steam boost button 4 to 5 times into the air until steam comes out before ironing.
- The steam boost mode is designed for thicker fabrics or those with stubborn wrinkles. It is recommended to keep the steam iron close to the clothes when using this mode for a better ironing effect.

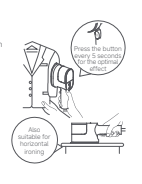
Press the button every 5 seconds for the optimal effect
Also suitable for horizontal ironing

• Pausing

To pause the operation of the steam iron, press the steam button to stop emitting steam, and do not press the steam boost button. Then place the steam iron properly and steadily on the base.

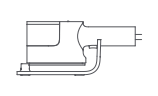

Note: If the steam iron is left idle for more than 8 minutes, it will automatically stop heating and enter standby mode, and its indicator will turn red. To resume its operation, simply move the steam iron to make it start heating again.

• Turning off

1. Before turning off the steam iron, remove and empty the water tank. Then enable the wet ironing mode or steam boost mode to drain the remaining water inside the steam iron to reduce the chance of bacteria growth and scale build-up.
2. Press the steam button to stop emitting steam, lock the steam boost button, and toggle the on/off switch from "I" to "○". Then unplug the power cord, and reinstall the water tank. Place the steam iron steadily on the base to wait for it to cool down.

• Storage

After turning off the steam iron, wait for about an hour to cool it down completely before storing it.

Warnings:

- Do not store the steam iron before cooling it down completely to avoid damage.
- Do not store the power cord when it is twisted; otherwise, the power cord may break, leading to burns, electric shocks, or fire due to short circuits.

Care & Maintenance

- It is recommended to regularly rinse and completely dry the water tank to avoid the build-up of scale.
1. Remove the water tank, open its cover, and rinse the interior and exterior of the tank with clean water.
2. Leave the water tank to dry in a cool place.
Caution: Do not clean the water tank with detergent to avoid deforming it.

- Once the steam iron has completely cooled down after use, it is recommended to wipe the ironing soleplate with a soft damp cloth to ensure the steam outlets are clean, scale-free, and unblocked.
1. Keep the ironing soleplate facing up.
2. Wipe clean with a soft damp cloth.
Caution: Ensure that the steam iron is disconnected from power and has completely cooled off before care and maintenance.

Specifications

Name	Handheld Steam Iron
Model	B502CN
Rated Voltage	220–240 V~
Rated Frequency	50–60 Hz
Rated Power	1200 W
Protection Against Electric Shock	Class I
Net Weight	840 g
Item Dimensions	Steam Iron: 245 × 78 × 95 mm Base: 184 × 90 × 79 mm
Power Consumption	Off mode: ≤ 0.3 W
Time to Enter the Condition	Off mode: ≤ 20 min

Troubleshooting

Errors	Possible Causes	Solutions
The indicator does not light up.	The on/off switch is in the off position.	Toggle on the on/off switch.
	The electrical outlet is loose.	Replace the electrical outlet.
	An internal error occurs.	Contact the after-sales service team.
The Indicator breathes red.	The high-temperature alarm is triggered.	Restart the steam iron after turning it off and cooling it.
	An internal error occurs.	Contact the after-sales service team.
The indicator remains red.	The steam iron enters standby mode after it is left idle for more than 8 minutes.	Move the steam iron to restart it for heating.
The water tank leaks.	The water tank cover is not properly closed.	Close the water tank cover properly.
	The seal ring ages.	Contact the after-sales service team.
The steam iron makes a louder water-pumping noise during operation.	The water pump is working.	This is normal.
	The water tank is empty.	Fill up the water tank with water.
	The water tank is not installed properly.	Install the water tank properly.

USER INFORMATION

Manufacturer: Ningbo Lofans Home Appliance Co., Ltd.
Address: Room 22-3, Langmu Building, Baisha Road, Cixi City, 315300 Zhejiang, China

Please read this user information sheet carefully before using this product. This product complies with the requirements of EU Regulation (EU) 2016/425 for Personal Protective Equipment CAT I and meets the requirements of EN ISO 21420:2020.

Product Name: Glove
Model: B502CN-ST
Item Dimensions: 187 × 235 mm
Material: Outer fabric: (100% polyester)
Lining: (100% polyester)
Filling: (100% polyester)
Check before use: Check the gloves for damage or changes before use. Do not use gloves if damaged.
Use: The glove is only for minimal risk, protection against dirt, and mild weather conditions. The glove must only be used when dry and with dry hands. When putting the glove on, you should ensure that there are no foreign objects in the glove and the glove fits well on the whole hand. When removing, pull the glove off the hand by pulling the cuff toward the fingers to avoid contamination and dry inside out before the next use.
Storage and transportation: Store in a dry place protected from sunlight at a temperature between 5 °C and 25 °C. Do not store near electrical devices.
Disposal: Follow local regulations.
Warnings: For multi-layered gloves, the performance levels are only applicable to the whole glove including all layers. These gloves are not suitable for protection when handling chemicals or against high temperatures!
If there is a risk of the glove being caught on moving machine parts, it must not be worn!
The useful life varies by the level of wear and intensity of use in the respective areas of use.
Production Date: Refer to the label of the glove
Expired date: The glove must be replaced – even without visible damage – after 5 years from the date of manufacture, as a protective effect is then no longer guaranteed.

Declaration of Conformity Website:
https://www.mi.com/global/service/support/declaration.html

Europe-EU Declaration of Conformity

We, Ningbo Lofans Home Appliance Co., Ltd., hereby declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: http://www.mi.com/global/service/support/declaration.html

WEEE Disposal and Recycling Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Manufactured for: Xiaomi Communications Co., Ltd.
Manufactured by: Ningbo Lofans Home Appliance Co., Ltd.
(a Mi Ecosystem company)
Address: Room 22-3, Langmu Building, Baisha Road, Cixi City, 315300, Zhejiang, China
For further information, please go to www.mi.com
For detailed e-manual, please go to www.mi.com/global/support/user-guide
User Manual Version: V1.3